

TO ENSURE SAFE AND PROPER USE	2
General rules	4
PHONE	9
Profile/photo	9
Front and side view	9
Top and bottom view	9
FUNCTIONS	10
KEY DESCRIPTION	13
FIRST USE	17
How to insert SIM card	17
How to insert SD card	17
How to insert battery	18
How to charge battery	18
FUNCTION MENU	19
APPLICATIONS	22
USEFUL INFORMATION	23
PACKAGE CONTENTS	24

TO ENSURE SAFE AND PROPER USE

Please read these guidelines to avoid an illegal or dangerous use.
For additional information please read the user manual.



Safe turning on of the device

Do not turn on the device when use of same is not allowed or when its use may cause interferences or danger situations.



Safety on traffic on top

Please obey local regulations, drive with both hands and strictly re-spect road safety.



Interferences

All wireless devices may have work improperly, owing to interferences.



Turning off when in hospital

Please obey the restriction rules and turn off the device near hospitals.



Turning off when on flight

Please obey the relevant rules and restrictions; any interference caused by a wireless device may be dangerous.



Turning off in service areas

Turn off wireless devices in gas station, or near chemical or inflammable stuff.



Qualified service

Only qualified staff is recommended for device installation and maintenance.



Accessories and batteries

Use only approved accessories and batteries, always use compatible devices.



Impermeability

This kind of device is not water-proof. You should keep it in dry places.



Get a copy

Remember to save one copy of any important data memorized in your device, for fear they may get lost due to unpredictable reasons.



Emergency call

Make sure network is available and the “call” feature is activated; when some network features are active, emergency call might be unavailable. So please deactivate these functions and dial the emergency number once again.

GENERAL RULES FOR A SAFE USE

- Only use batteries and battery chargers approved by the manufacturer. Use of any other product may cause losses to the battery, overheating, explosion or flame.
- Avoid crashes, shakings, or violent throws of your device.
- Do not put battery, phone or battery charger in microwave ovens or in any other high pressure device.
- Avoid to use phone in places containing explosive gas, it could not function or catch fire.
- The phone should be kept away from heat sources, do not expose it to excessive dust or humidity, which could cause malfunctions.
- Phone must be kept out of reach of children.
- Do not lay the phone on an unstable or unsmoothy surface.

TIPS FOR A SAFE USE OF THE PHONE

- Remember to switch your phone off when in hospital, in flight or in places where use of mobile is not allowed. Mobile phones could affect normal functions of electronic or medical devices; therefore please obey the concerned rules. Please make sure that your mobile phone does not switch on automatically in flight due to the “alarm” function.
- Do not use your mobile phone when the signal is weak or you are in proximity of electronic devices of high precision, particularly near aids for people with hearing disabilities, pacemakers and other medical devices, near fire alarms, car doors or other automatic control devices.
- Do not tap or hit heavily the display, it could break.
- Do not disassemble or modify the phone, it could be dangerous and may cause malfunctioning.
- Do not use needles or pen tops to tap on keyboard; this may cause a serious damage and prevent its working.
- Do not store the phone near magnetic strips, the radiations could cancel information stored in the hard disk, payment or credit cards.
- Keep the phone dry, any pouring or spilling of water or other liquids may cause an overheating, loss or bad working of the phone.
- You are requested to use suitable earphones when driving.
-

RULES FOR SAFE USE OF BATTERY

- Do not throw the battery into the fire, it could catch fire and explode.

- Do not weld the contacts of the battery, it might cause losses, overheating, explosion or flame.
- Should the battery liquids affect eyes, rinse them well with abundant water, do not rub with fingers and go immediately to the hospital.
- Do not disassemble or modify the battery, it could cause losses, overheating, explosion or flame.
- Do not use the battery near fire or heating devices; this could cause losses, overheating, explosion or flame.
- Should the battery overheat, change colour or deform during its use, when it is under charge or in deposit, please stop immediately the use of same and replace it immediately.
- Should the battery have losses or exhale bad smells, immediately remove it from heating sources, to avoid danger of fire or explosion.
- Do not store the battery in wet conditions, this may cause overheating, smoke or erosion of the battery itself.
Keep the battery far from places exposed to the blazing sun or at high temperatures, this may cause losses or overheating which could affect the lifespan of the battery.

RULES FOR SAFE USE OF BATTERY CHARGER

- Please use alternating current 220V; a misuse could cause losses, fire or damages to the phone and to the battery charger.
- Avoid short-circuits to the battery charger; this could cause electric discharges, smoke and could damage the battery charger.
- Control the battery charger does not have a damaged cable, it could cause fire and

electric discharges.

- Keep the battery charger far from water holders to avoid sprinkling which could cause overheating, losses or bad working.
- Should the battery charger get wet due to water or any other liquid, immediately disconnect it from the power socket to avoid any overheating, fire, electric discharge or bad working.
- Do not disassemble or modify the battery charger, this may cause damage to person, electric discharge, fire or damages.
- Avoid to store it in places with high umidity like bathrooms; this could cause electric discharges, fire or bad working.
- Do not handle the battery charger, the power cable or socket with wet hands.
- Do not overload or modify the power cable, this could cause electric discharges or fire.
- Unplug the power cable prior to any cleaning or maintaining of your phone.
- Hold steady the battery charger when unplugging, otherwise the power cable could break and cause electric discharges or fire.

CLEANING AND MAINTAINING

- Mobile phone, battery and battery charger are not impermeable, thus they should not be used in places with high humidity like bathrooms. Make sure the phone does not become wet under rain.
- Use a soft cloth to clean phone, battery and battery charger.
- Do not use alcohol, diluents or benzine to clean the phone.

GENERAL TIPS

For the phone:

- do not use your mobile phone next to other phones, television, radio and electronic devices in offices

For the battery:

- store the battery in places not exposed to blazing sunlight, in fresh and windy places.
- battery has a limited lifespan; after frequent charges the charging time shortens. If the battery does not charge after several attempts, this means that it should be replaced with a new, specific and approved battery.
- please dispose of the exhausted batteries obeying the local laws, separately from the daily waste.

For the battery charger:

- Do not charge in the following places: under blazing sunlight, in places with temperature inferior to 5° or superior to 40°; in wet, dusty places and with vibrations which may cause bad working; near to electronic devices as TV and radios (this may damage quality of sound and images).

PHONE/PHOTO OF THE PRODUCT






MAIN FUNCTIONS

- It runs with any provider (subscriptions or pre-paid cards) except TRE provider.
- Big characters, visualized on a back-lit screen, for an optimal readability.
- Big keys.
- SOS Button on the back of the phone. As you press the SOS button, the phone is alerted and calls the 5 numbers registered in sequence and sends preset SOS messages
- SMS feature
- Speaking keyboard
- Capable to read memory cards max 8GB
- Contacts list up to 300 numbers
- FM Radio / Bluetooth
- Audio format: MP3
- Calendar, calculator and clock with alarm
- Multi-languages
- Endurance: 150-200 hours (depending on the network) standby / 3-4 hours for conversation.
- Torch



 

Call features	Speaker-phone	YES
	Quick calls	YES
	Call register	YES
	Waiting calls	YES
	Limited calls	YES
	Redirected calls	YES
Contacts list	Memory capacity	200
	Quick search	YES
	Copy/transfer contacts between SIM and phone	YES
SMS	Memory capacity	150
	Provider messages	YES
MMS	YES	
GPRS	YES	
Setting	Languages	Multilanguages
	Security PIN code	YES

Sound	Ringtones	Poliphonic melodies
Other features	Calculator	YES
	FM Radio/BT	YES
	GPS	NO
	Torch	YES
	MP3	YES
	Vibration	YES
	Camera	YES

KEY DESCRIPTION

Key	Function
 Green key (on top to the left)	If tapped from main menu it visualizes the latest calls. It may be used as “ok” button to go on in menu options. It answers and sends calls.
 Red key (on top to the right)	on/off phone. It allows to get out from menu options. It ends or refuses calls.
 Arrows or direction keys (on top in the centre)	They are used in the menu to move vertically up and down. When a call arrives or during conversation, by tapping the key “up” the volume becomes higher, while by tapping the key “down” volume lowers.

Numerical keys	<p>They allow to enter numbers and characters. Keys from 2 to 9 may be connected to the corresponding numbers to be called, simply pressing them (quick call, quick composition).</p> <p>How to set quick calls (keys from 2 to 9) You may use this function only with numbers already stored in the contacts list</p> <p>a) To set a number tap: Menu=>organizer=> Quick composition=> insert the number =>modify=> insert the number=> it is automatically saved. Press and hold the numerical key corresponding to the call which will start immediately.</p> <p>b) To modify or cancel the number set for quick calls tap: Menu=>organizer=> Quick composition=> set the number=> select the number to be modified or cancelled=>options=> Modify /Cancel.</p>
Key 1	Numerical key 1 may be used in typing SMS messages to select special characters or punctuation

 Torch  Asterisk key  Hash key  FM radio	<p>Press and hold to switch torch on/off</p> <p>Asterisk key allows to block keyboard. Press and hold this key for 2/3 seconds to lock or unlock the phone. To select keyboard lock tap: Menu=>Settings=>Phone configuration=>Display setting=>automatic lock of keyboard => select the desired option. This key allows to select the symbols when preparing a text<, when you are writing a text it allows to move to choose the symbols. It allows to get a higher volume when listening to music.</p> <p>This key allows to switch the phone profile from general setting to silent setting (press and hold for 2/3 seconds). When you are writing a text it allows to change method of setting and when you are choosing symbols it allows to move to the left. It lowers volume when listening to music.</p> <p>Press and hold to switch FM Radio on/off.</p>
--	--



SOS key

This key may be used to send emergency calls to 5 different numbers and send preset text messages.

Emergencies:

When you press SOS button, the phone releases an alerting sound and sends immediately a preset message to the memorized numbers, calling them in sequence until someone answers.

Setting emergency numbers:

Tap: Menu=>Organizer => tap SOS =>SOS Numbers =>Modify=> add the numbers you want to insert in the SOS list (the numbers may have been previously stored in the contacts list or you may edit them as new ones) = do you want to save them? =>Yes.

 
You may insert 5 numbers to which refer in case of emergency.

Writing emergency message:


Tap: Menu=>Organizer => tap SOS =>SOS Message=>insert message you want to send in case of emergency=> save

FIRST USE

- How to insert SIM CARD: remove the back cover, as shown in the figure, and insert SIM Card, carefully controlling the side of insertion.
- How to insert a memory card (max 8GB): remove the back cover, as shown in the figure, insert memory card into the slot, and then replace battery and back cover.

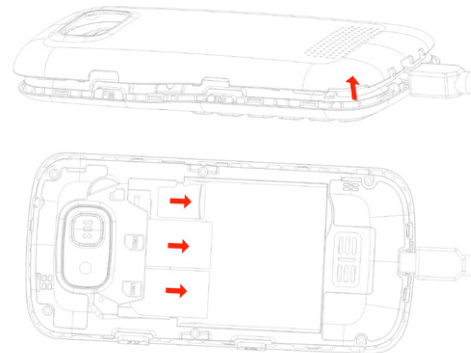


INSERT BATTERY

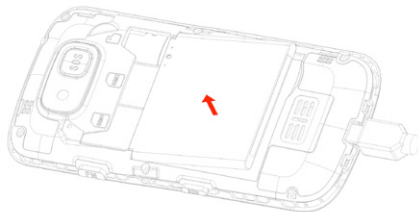 

BATTERY CHARGER

 see figure, carefully controlling the side of the micro-USB connector.

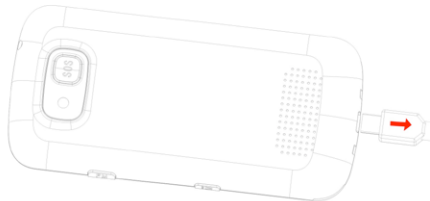

FUNCTION MENU

Menu scheme:

CONTACTS LIST => it manages contacts

MESSAGES => setting of SMS MMS

CALLS REGISTER => calls register (missed / outgoing / ingoing and eliminated)

Settings of the calls (Call forwarding – Call deviation – Call locked – Changing line

Advanced settings (authomatic recall - memo about length – way of answering).

ORGANIZER => SOS setting

Quick composition (connecting to the phone numbers for quick composition regarding keys 2/9)

Calendar

Alarm

Services (to enter internet WAP)

File Manager (managing files on phone memory and memory card SD)

Calculator

MULTIMEDIA => Camera

Pictures visualizer

Video camera

Video Player

Audio Player

Audio recorder

FM radio

SETTINGS => DUAL SIM setting (SIM 1 or 2 active)

User profiles (ringtone settings: silent, vibrate, meeting etc)

Phone settings (date and time - Language – writing methods – display setting – flight setting- various settings)

Setting of PIN to lock SIM and phone

Network setting (selecting automatic or manual network)

Connectivity (Bluetooth – connecting SIM – Data account to set account for WAP – reset factory settings or reset phone).

CONTACT LIST

Managing contacts list allow to insert data and telephone numbers of the various contacts to search for them, to call them or to send messages to them. For adding contacts tap:

Add a new contact

Follow: Menu => Add new contact => select => decide whether to insert the number on the SIM or on the phone => add name and number => options => Save

MESSAGES

In this menu you may read and received message, write a new message or verify the sent messages; you may write SMS and MMS

CALLS

In this menu you may visualize the list of the latest calls - missed, effected or received

DATE AND TIME

Tap: Menu => Settings => Phone configuration => Date and time => Date and time setting => Save You may insert date and time and the referred place

METHOD FOR LANGUAGE SETTING

To choose a language tap: Menu => Settings => Phone configuration => Language => ...

To choose method of message setting, tap: Menu => Settings => Phone configuration – Preferred input method=>....

MULTIMEDIA

AUDIO

How to manage the audio buttons:

Through asterix and hash buttons you may adjust the volume.

Key 5 sets or pauses listening to music. For FM radio on/off.

Key 4 and 6 allow to select the tracks – in RADIO function you may search the various channels automatically.

Keys arrows allow the manual search of the channel.

VIDEO

This feature allows to reproduce videos, you may manage buttons through navigation keys right-left and central confirmation key. Volume may be adjusted by up-down key and by the left function key you may check the list.

Tap: Menu => Multimedia

Select this menu to record and/or reproduce audio-video files or to manage photo/videocamera or FM radio functions.

MP3 files are supported. To listen to music you must insert memory-card into its slot.

Useful information

- PHOTO and VIDEO: to take a snap and to reproduce video press key 0
- RADIO: key 5 ON/OFF
- Audio recorder: it allows an audio recording

APPLICATIONS

ALARM

The feature alarm can run both ringtones and vibration and allows to use up to 4 different times.

To choose Alarm tap: Menu => Settings => Organizer => Alarm => Modify => set the alarm

CALCULATOR

This feature allows to run simple mathematical calculus, using numbers through the keyboard and selecting the operations through the function keys.

To choose calculator: Menu => Settings => Organizer => Calculator

BLUETOOTH

This phone is pre-set to run wireless connections with Bluetooth devices. These connections allow to transfer au-dio, data or to sync with other devices.

Please tap: Menu => Settings => Connectivity => Bluetooth => switch on

USEFUL INFORMATION

HASH KEY

By pressing and holding this key, you may modify call reception modes, that is you may switch from “general” mode to “silent” mode and vice versa.

Furthermore, during the composition, you may change method of inserting.

CHANGE OF RINGTONES

To change ringtones, tap: Menu => Settings => User profiles => General => Options =>

Personalize: you may change ringtone (for instance vibration and/or ringtones), volume and so on.

SETTING SPEAKING KEYBOARD

Tap: Menu => Settings => User profiles => General => Options => Personalize => select KEYS (n°9) and insert “Voice tone”.

RESET FACTORY SETTINGS

Digit password 1122 to reset pre-defined settings.

Menu => Settings => reset factory’s settings => digit 1122

PRODUCT SPECIFICATIONS

GSM: 850/900/1800/1900 MHz

Supported data network: WAP

Size: 122,2*60*13.6

Weight, including battery: 98g

Colour display: pixel

T Flash supported up to a 8 GB

Bluetooth version: 3.0

Battery 650 mah

Talk time (conversation range): 5/7 h.

Stand-by time (Endurance): 5/7 days

WAP

MMS: supported

Memory contacts list: 200

Message memory capacity: 50

Audio recording: YES

Video player: YES

*Data on conversation range are only indicative, strictly depending on provider and signal quality

WARNING:

Product features described in present manual may be subject to variations by the manufacturer without prior notice.

PACKAGE CONTENTS

Battery	YES
Battery charger	YES
USB cable	YES
Earphones	YES
Wall charger	YES
Manual	YES



MANUFACTURER'S LIMITED WARRANTY

This warranty does not limit the rights granted to consumers by specific national rules on consumer goods. The period of time during which this warranty is valid is limited to 24 months starting from the first date of purchase of the product. If it is used for professional purposes, the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, remove any interferences that may be encountered, and caused by manufacturing defects. Except as required by applicable law, the defects found by assistance personnel will be resolved by repair or, at the discretion Easyteck, through the replacement of the Product.

This limited warranty is only valid in the European country for which the product is intended and is the sole responsibility of the national distributor of reference for that country and which is identified in the bottom of the certificate. Some limitations in assistance services covered by this warranty may arise from the presence of specific components for a country.

Warranty referred to accessories and spare parts contained in the package

The package for the product covered by this warranty may contain accessories or spare parts that have a different warranty period since they are consumables, the warranty periods are summarized as follows:

- 24 months for cell phones
- 12 months for non-consumable accessories
- 6 months for batteries, headsets, memory cards or other.

The following are not covered by the warranty:

- The manuals and/or packaging
- User contents, configurations downloaded into the product or third party software
- Costs related to shipping the product to and from an authorized service center
- Deterioration caused by normal wear and tear including batteries

- Breakage due to accidental causes or inexperience and all damages caused by any external agent.
- Damage caused by improper use as described in the manual supplied with the product.
- All failures caused by use of non-original accessories, by viruses, or by connections to computers and networks.
- All defects caused by exposure to moisture and/or steam, from use under extreme thermal or environmental conditions or in the presence of corrosion, oxidation, food, liquid or chemical spills.

Limits of Liability:

The SIM card that is required to use the phone is provided by the phone operator and is therefore excluded from the warranty.

-This warranty is the protection given to the consumer by Easyteck through the reference dealer and is not intended to limit guarantees to the consumer which the retailer must ensure in accordance with the laws of the different countries.

-This warranty will be honored only and exclusively at authorized service centers or at retailers that are responsible for selling Easyteck brand products.

-The terms of the Guarantee shall not be extended under any circumstances and will be effective only from the date the product is first sold to the final consumer, as certified by a valid receipt.

-The faulty parts replaced during repairs under warranty are the sole property of Easyteck and cannot be demanded by the consumer in any way.

-To the extent permitted by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damages due to loss of user data caused by any defect covered by the warranty.

-The consumer, to be able to obtain the repair, must always deliver the product to the authorized service center at his own expense, devoid of any lock or security code that limits or prevents use.

-Loss of profit, losses caused by non-use of the product or loss of revenues for any direct, indirect, special or consequential damages are also excluded from the liability.

-The responsibility of Easyteck is always limited to the purchase value of the product and the consumer is always responsible for keeping a copy of the personal data and software stored in the phone's memory.

-For faults which, for the reasons listed above, are not attributable to the terms of this warranty the consumer who does not want to have the repair carried out, will be required to pay the corresponding amount requested

by the service center. Easyteck shall in no way be held responsible for this request because it is not under warranty.

CAUTION: The warranty is not valid if any attempts have been made to open or tamper with the product, including remove and/or obliterate labels and/or the IMEI code of the product.

Distributor for Italy:

Fonex S.p.A. via dell'Artigianato 2/4 – 12040 – Sant'Albano Stura (CN)

Stamp and signature of dealer

Date of purchase

C € 0700



CORRECT DISPOSAL OF THE PRODUCT INFORMATION FOR USERS

pursuant to Article 13 of the Legislative Decree of 25 July 2005, No. 151 “Implementation of Directives 2002/95/EC, Directive 2002/96/EC and 2003/108/EC on restricting the use of hazardous substances in electrical and electronic equipment and the disposal of waste”

The symbol of the crossed-out dustbin shown on the equipment or on the packaging indicates that the product, at the end of its useful life, must be collected separately from other waste. The recycling of this equipment at the end of life is organized and managed by the manufacturer. The user who wishes to dispose of this equipment should contact the manufacturer and follow the system that it has adopted to allow for the separate collection of at end of life. Appropriate separate collection in order to send old equipment for compatible recycling, treatment and disposal helps to prevent potential negative effects on the environment and on health and promotes the reuse and/or recycling of the materials of which the equipment is composed. Illegal disposal of the product by the owner will result in the application of administrative penalties provided by law.



CORRECT DISPOSAL OF PRODUCT BATTERY

(Applicable in THE European Union and other European countries with separate battery collection systems)
The marking on the battery or on documentation or packaging indicates that the battery in this product should not be disposed of with other household waste at the end of the life cycle.
Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead in quantities above the levels referred to in the EU Directive 2006/66.
If the battery is not properly disposed of, these substances can cause harm to human health or the environment.

Declaration of conformity:

We hereby declare that the product W90/T107-T107RB-T107W has been tested by Phoenix testlab and has passed the standards required by the following EMC Directive 1999/5/EC for the following specifications:
EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013
EN50360:2001, EN 50360:2001, EN 50566:2013, EN 62209-1:2006, EN 62209-2:2010, EN 62479:2010, EN 301 489-1 V1.9.2, EN 301 489-7 V1.3.1, EN 301 511 V9.0.2

Product sold in the European community